



GOLF SWING CAMERA SET

Camera Setup

1. Connect the USB power cable from the camera into the USB port on your computer.
2. Locate and launch your golf simulator software program (i.e. Uneekor Ignite, Uneekor Refine, etc.) and access a training mode. (i.e. Driving Range).
3. Take a shot and access the camera menu to select your swing camera. Choose the option with the highest resolution (1920x1080) to focus your lens.
4. Focus the camera by turning the lens. If you are unable to achieve focus, follow the troubleshooting steps on the back of this page.
5. Before placing your cameras, you may want to choose a lower resolution option to allow for a full range of view.
6. Place your cameras where you can view your full swing, commonly 5-7 feet behind and to the side of the golfer.



GOLF SWING CAMERA SET

Camera Setup

1. Connect the USB power cable from the camera into the USB port on your computer.
2. Locate and launch your golf simulator software program (i.e. Uneekor Ignite, Uneekor Refine, etc.) and access a training mode. (i.e. Driving Range).
3. Take a shot and access the camera menu to select your swing camera. Choose the option with the highest resolution (1920x1080) to focus your lens.
4. Focus the camera by turning the lens. If you are unable to achieve focus, follow the troubleshooting steps on the back of this page.
5. Before placing your cameras, you may want to choose a lower resolution option to allow for a full range of view.
6. Place your cameras where you can view your full swing, commonly 5-7 feet behind and to the side of the golfer.